


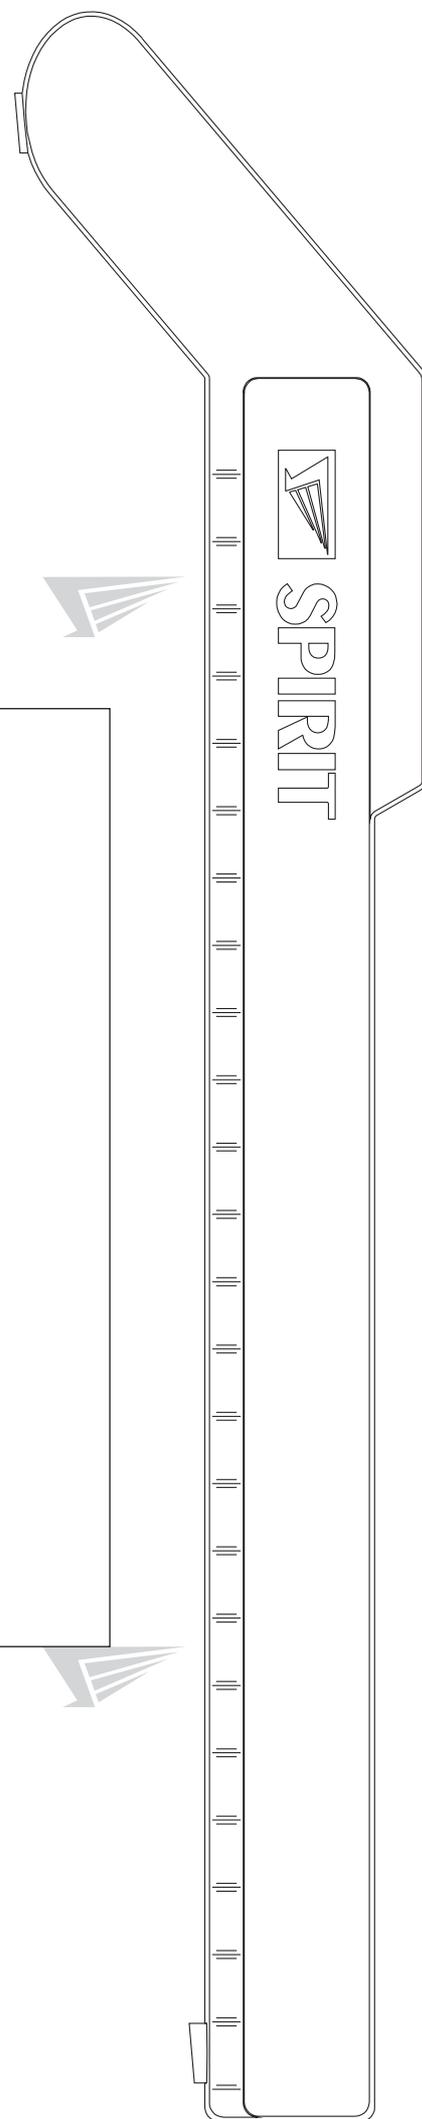

Contents

SPIRIT FOLIO - A quick overview	1
The Controls - The Mono Input Channel	3
The Stereo Input Channel	5
The Master Section	7
Introduction	9
Safety Precautions	9
Initial Setting Up	10
The Controls in More Detail	11
Using Folio - Typical Applications	16
Stereo Public Address	16
Stereo Recording	17
Location Recording	17
Glossary	18
Technical Specifications	19
System Block Diagram	20

SPIRIT FOLIO USER GUIDE




FEED YOUR SIGNAL SOURCES IN HERE.

MIC is for low level microphone signals such as vocals (Mono Inputs only)

LINE is for higher level signals such as keyboards, guitars, drum machines and tapes

LISTEN HERE

You can listen to the signal from here on stereo HEADPHONES.

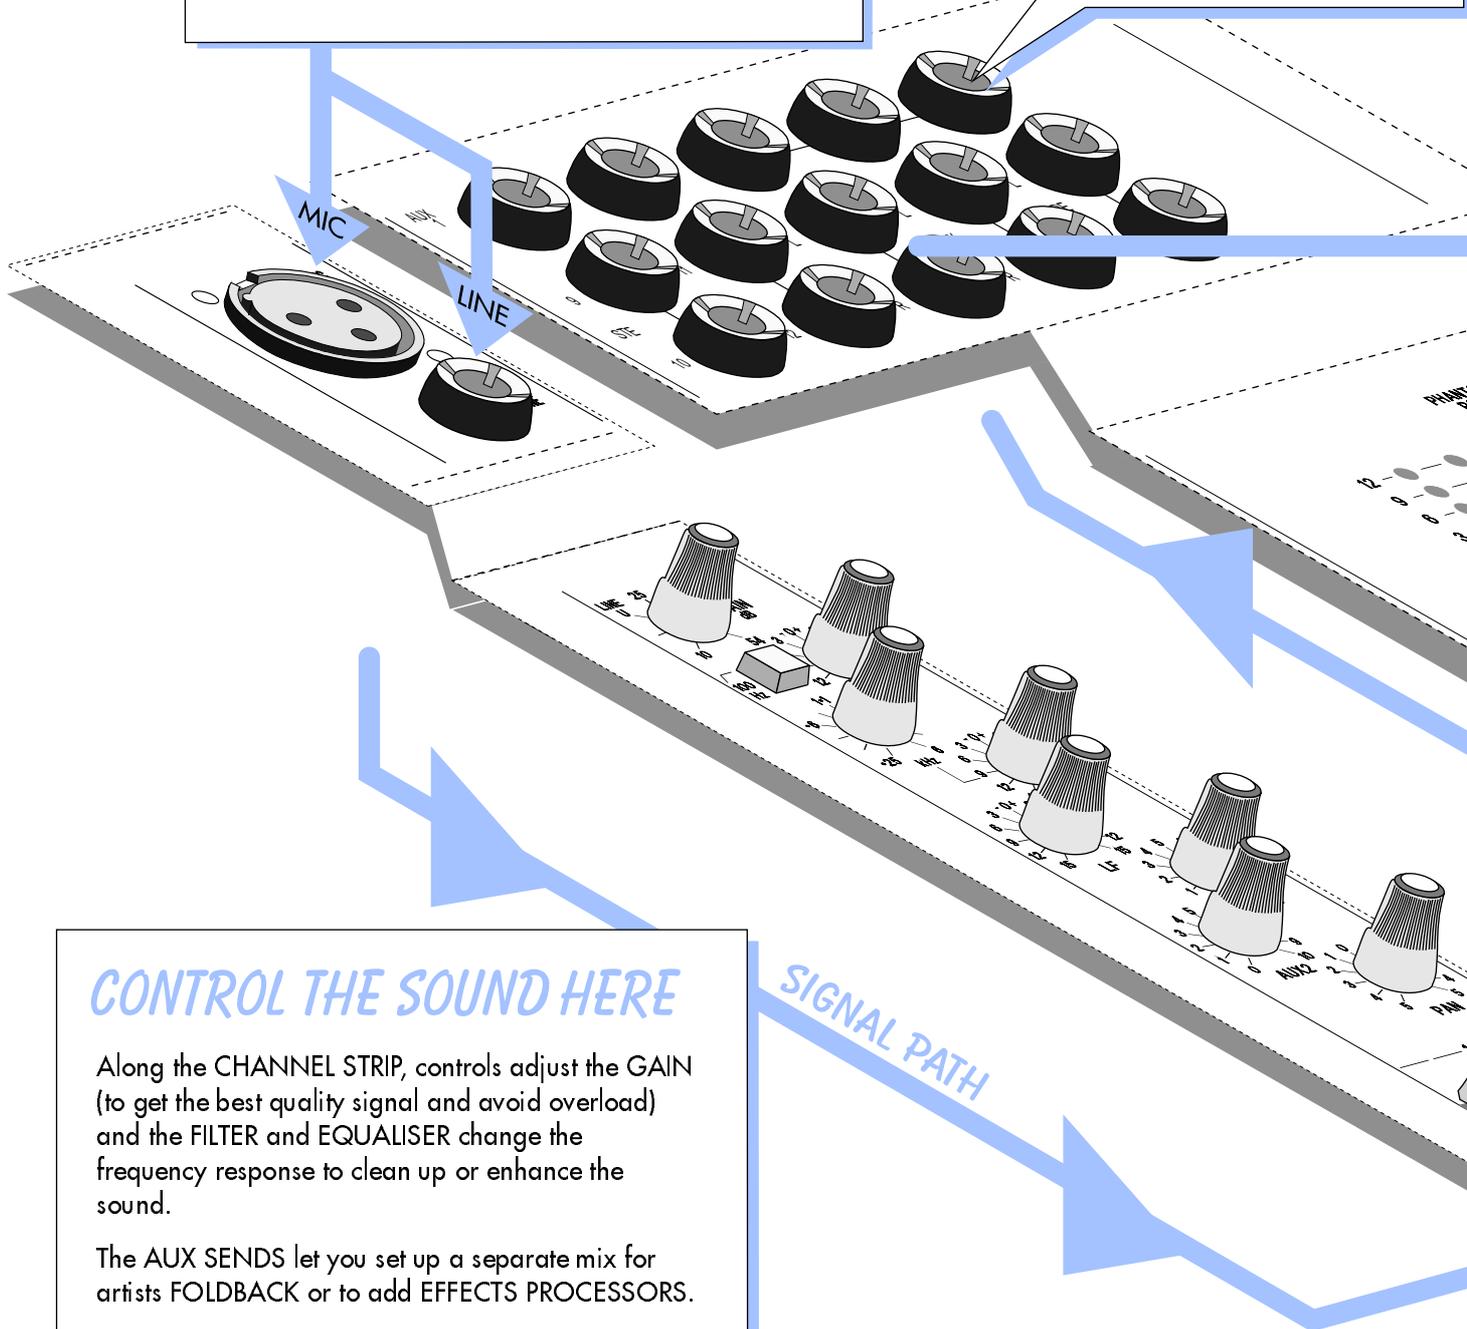

CONTROL THE SOUND HERE

Along the CHANNEL STRIP, controls adjust the GAIN (to get the best quality signal and avoid overload) and the FILTER and EQUALISER change the frequency response to clean up or enhance the sound.

The AUX SENDS let you set up a separate mix for artists FOLDBACK or to add EFFECTS PROCESSORS.

PAN swings the signal to the LEFT or RIGHT of the stereo MIX output.

SPIRIT FOLIO

A QUICK OVERVIEW

MIC INPUT

Accepts XLR-type connectors and is designed to suit a wide range of BALANCED or UNBALANCED signals. Professional dynamic, condenser or ribbon mics are best because these will be LOW IMPEDANCE. You can use low-cost HIGH IMPEDANCE mics, but the level of background noise will be higher.

If you turn the PHANTOM POWER on (top right-hand side of the mixer) the socket provides a suitable powering voltage for professional condenser mics. Unplug any mics if you want to use the LINE Input. Set the input level using the GAIN knob.

➔ See page 11

LINE INPUT

Accepts 3-pole 'A' gauge (TRS) jacks. Use this input for sources other than mics, such as keyboards, drum machines, synths, tape machines or guitars. The input is BALANCED for low noise and immunity from interference, but you can use UNBALANCED sources by wiring up the jacks as shown on page 11, although you should then keep cable lengths as short as possible. Unplug anything in the MIC input if you want to use this socket. Set the input level using the GAIN knob.

➔ See page 11

GAIN

This knob sets how much of the source signal is sent to the rest of the mixer.

Too high, and the signal will distort as it overloads the channel.

Too low, and the level of any background hiss will be more noticeable and you may not be able to get enough signal level to the output of the mixer. See 'Initial Setting Up' to learn how to set the GAIN correctly.

➔ See page 11

100HZ HI-PASS FILTER

Pressing this switch reduces the level of bass frequencies only. This feature is very rare for such a small mixer.

Use this in live PA situations to reduce stage rumble or 'popping' from microphones.

➔ See page 11

EQUALISER - LF EQ

Turn to the right to boost low (bass) frequencies, adding warmth to vocals or extra punch to synths, guitars and drums. Turn to the left to reduce hum, stage rumble or improve a mushy sound. Set the knob to the centre-detented position for a neutral EQ response.



SPIRIT FOLIO

THE MONO INPUT CHANNEL

EQUALISER - HF EQ

Turn to the right to boost high (treble) frequencies, adding crispness to cymbals, vocals and electronic instruments. Turn to the left to cut these frequencies, reducing hiss or distorted consonants which can occur with certain types of microphone. Set the knob in the centre-detented position for a neutral EQ response.

EQUALISER - OVERVIEW

The Equaliser (EQ) allows fine manipulation of the sound, particularly to improve the sound in live PA applications where the original signal is often far from ideal.

There are three sections (HF, MID & LF) giving the sort of control usually only found on much larger mixers. The EQ knobs can have a dramatic effect on the sound, so use them sparingly and listen carefully to the result.

➔ See page 12

EQUALISER - MID EQ

There are two knobs which work together to form a SWEPT MID EQ. The lower knob provides boost and cut, just like the HF EQ knob, but the frequency at which this occurs is set by the upper knob over a wide range. This allows some truly creative improvement of the signal in live situations, because this mid band covers the range of most vocals. Listen carefully as you use these controls together to find how particular characteristics of a vocal signal can be enhanced or reduced. Set the lower knob to the centre-detented position for a neutral EQ response.

AUX SEND 1

This is used to set up a separate mix for FOLDBACK, EFFECTS or recording, and the combination of all the Aux 1 Sends is mixed to the Aux 1 Output. For Effects it is useful for this to fade up and down with the FADER (this is called POST-FADE), but for Foldback or Monitor feeds it is important for the send to be independent of the FADER (this is called PRE-FADE). The Master Section AUX1 PRE switch allows you to choose pre- or post-fade across the whole mixer as required. Leave the knob turned down when not in use.

➔ See page 12

AUX SEND 2

This is similar to the Aux Send 1 control, but is always POST-FADE.

PAN

This control sets the amount of the channel signal feeding the Right and Left MIX outputs, allowing you to move the source smoothly across the stereo image. When the control is turned fully right or left you are able to place the signal to either left or right of the output.

➔ See page 12

FADER

The linear FADER gives you smooth control of the overall signal level in the channel strip, allowing precise balancing of the various source signals being mixed to the Master Section. It is important to set up the input GAIN correctly to give full travel (i.e. maximum control) on the fader. See the 'Initial Setting Up' section on page 10 for help in setting a suitable signal level.

➔ See page 12

PFL

When the PFL (Pre-Fade-Listen) switch is pressed the pre-fade channel signal is fed to the monitor output or headphones, replacing the normal source (either Mix or Tape Return). You use this switch to listen to a channel signal without affecting the mixer outputs, to check the signal quality or simply to check that it is there! You would also use the PFL switch to set the input GAIN, and this is explained on page 10 - 'Initial Setting Up'.

➔ See page 12

STEREO INPUT L & R

Accept 3-pole 'A' gauge (TRS) jacks. Use these inputs for sources such as keyboards, drum machines, synths, tape machines or as returns from processing units. The inputs are BALANCED for low noise and immunity from interference, but you can use UNBALANCED sources by wiring up the jacks as shown later in this guide, although you should then keep cable lengths as short as possible.

➔ See page 13

HF EQ

Turn to the right to boost high (treble) frequencies, adding crispness to percussion from drum machines, synths and electronic instruments. Turn to the left to cut these frequencies, reducing hiss or excessive brilliance. Set the knob in the centre-detented position when not required.

➔ See page 13

INPUT +4/-10

Most professional equipment uses input and output levels of +4dBu, but semi-professional tape machines use a low level of -10dBV (or hi-fi systems 100mV). This switch allows you to match the stereo input to either standard. Release the switch for +4dBu, or press for -10dBV.

➔ See page 13

LF EQ

Turn to the right to boost low (bass) frequencies, adding extra punch to synths, guitars and drums. Turn to the left to reduce hum, boominess or improve a mushy sound. Set the knob to the centre-detented position when not required.

➔ See page 13

AUX SEND 2

This is similar to the Aux Send 1 control, but is always POST-FADE.



SPIRIT FOLIO

THE STEREO INPUT CHANNEL

AUX SEND 1

This is used to set up a separate mono mix for FOLDBACK or to drive EFFECTS PROCESSORS, and the combination of all the Aux 1 Sends is mixed to the Aux 1 Output. For Effects it is useful for this to fade up and down with the FADER (this is called POST-FADE), but for Foldback or Monitor feeds it is important for the send to be independent of the FADER (this is called PRE-FADE).

The Master Section AUX1 PRE switch allows you to choose pre- or post-fade as required. Leave the knob turned down when not in use.

➔ See page 13

BALANCE

This control sets the amount of the channel signal feeding the Right and Left MIX outputs, allowing you to balance the source in the stereo image. When the control is turned fully right or left you feed only that side of the signal to the mix.

➔ See page 13

PFL

When the PFL (Pre-Fade-Listen) switch is pressed a mono sum of the pre-fade channel signal is fed to the monitor output or headphones, replacing the normal source (either Mix or Tape Return). You use this switch to listen to a channel signal without affecting the mixer outputs, to check the signal quality or simply to check that it is there!

➔ See page 13

FADER

The linear FADER gives you smooth control of the overall signal level in the channel strip, allowing precise balancing of the various source signals being mixed to the Master Section. It is important that the input level is set correctly to give maximum travel on the fader. See the 'Initial Setting Up' section on page 10 for help in setting the right level.

➔ See page 13

BARGRAPH METERS

The three colour, peak-reading BARGRAPH METERS normally show the level of the MIX RIGHT and MIX LEFT outputs, to give you a constant warning of excessive peaks in the signal which might cause overloading.

With the Master Faders at about '0', aim to keep the signal just touching the amber segments with a steady signal, or up to +6/+9 if there are heavy transients such as drum beats. If you cannot achieve a reasonable level, check the set-up of the inputs.

➔ See page 14

PHANTOM POWER

Many professional condenser mics need PHANTOM POWER, which is a method of sending a powering voltage down the same wires as the mic signal. Press the switch to enable the power to all of the MIC inputs.

DO NOT connect unbalanced mics to the mono inputs with the phantom power switched on. They may be damaged by the phantom power voltage on the XLR connectors.

➔ See page 14

AUX 1 PRE

Press this switch to make all of the AUX 1 Sends on the channel strips PRE-FADE. This means that they will all be unaffected by the position of the channel faders, making them ideal for FOLDBACK or MONITORING.

When the switch is released the AUX 1 Sends are all POST-FADE, and will fade up and down with the channel faders.

➔ See page 14

AUX 1 AFL

Just like the PFL switches on the channels, you can monitor the AUX 1 output by pressing the AFL switch. This routes the AUX 1 output signal to the MONITOR or PHONES, replacing any existing signal.

The RIGHT METER also switches to display this signal and the PFL/AFL LED lights to warn that a PFL or AFL switch is pressed. When you let go of the switch the Monitor swaps back to the previous source.

➔ See page 14

AUX 2 AFL

This works just the same as AUX 1 AFL.



SPIRIT FOLIO

THE MASTER SECTION

OSCILLATOR TO MIX

A built-in 1kHz OSCILLATOR provides a test tone for system tests or aligning Tape Machines.

Press the switch to turn ON the oscillator and feed the tone to the MIX outputs.

Beware of accidentally sending bursts of loud tone to the outputs ! SO DON'T PRESS THIS BUTTON DURING A LIVE PERFORMANCE!

➔ See page 14

TAPE RETURN LEVEL

The TAPE RETURN jacks are an ideal place to connect the playback of a tape machine, without using up any of the LINE inputs.

This pot sets the level of playback signal fed either to the MIX (when MIX is pressed) or MONITOR, when TAPE RETN is pressed.

➔ See page 15

TAPE RETURN TO MONITOR

Press this switch to route the TAPE RETURN signal to the MONITOR or PHONES outputs.

Adjust the level with the TAPE RETURN LEVEL control.

➔ See page 15

TAPE RETURN TO MIX

Press this switch to route the TAPE RETURN signal direct to the mix outputs. Adjust the level with the TAPE RETURN LEVEL control.

➔ See page 15

MASTER FADERS

The MASTER FADERS set the final level of the MIX outputs, and separate faders are provided for LEFT and RIGHT. These should normally be set close to the '0' mark if the input GAIN settings have been correctly set.


➔ See page 14

MONITOR & PHONES LEVEL

This control sets the output level to the MONITOR LEFT & RIGHT outputs.

If HEADPHONES are plugged into the PHNS jack the Monitor outputs are cut off, and the knob then sets the headphone listening level.

➔ See page 15

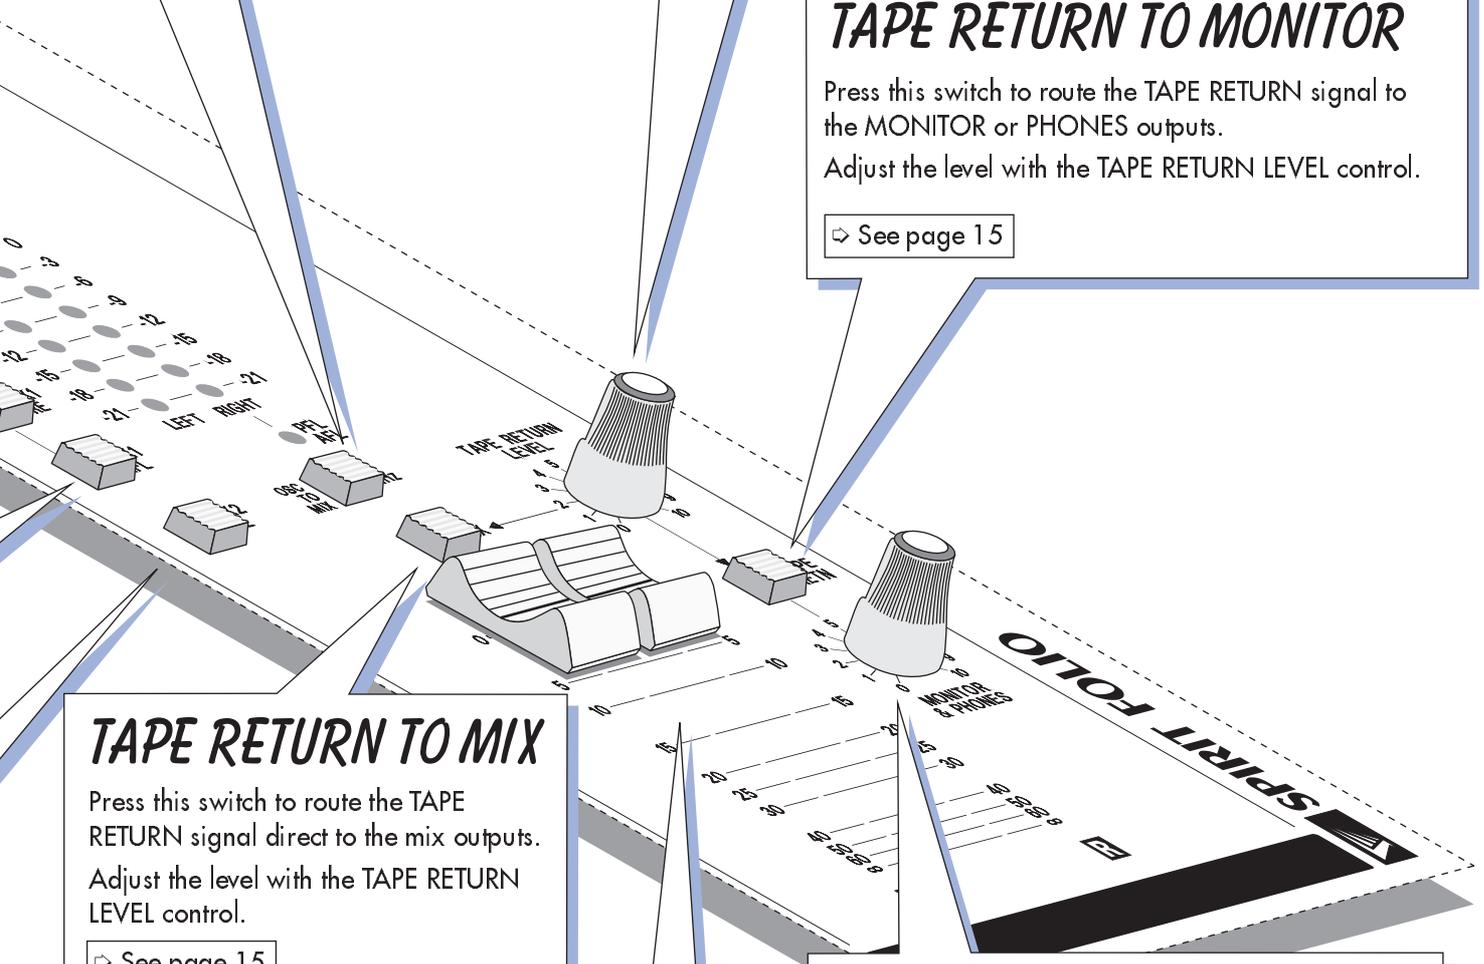

INTRODUCTION

Thank you for buying a **SPIRIT FOLIO** mixer, brought to you with pride by the **SPIRIT** team of Peter, Graham, Malcolm, Martin, Peter, George, Colin, Tony, Dave, Mukesh, Andy, Candy and Simon. We hope you have as much fun as we did!

Owning a **SPIRIT** console brings you the expertise and support of one of the industry's leading manufacturers and the results of over 20 years experience supporting some of the biggest names in the business.

Built to the highest standards using quality components, **FOLIO** is designed to be as easy to use as possible, but some time spent **NOW**, looking through this manual and getting to know your new mixer will give you lots of helpful tips and confidence, away from the pressures of a live session. Don't be afraid to experiment to find out how each control affects the sound - this will only extend your creativity and help you to get the best from your mixer.

SAFETY PRECAUTIONS

For your own safety and to avoid invalidation of the warranty please read this section carefully.

The FOLIO desk must only be connected through the Power Supply Unit supplied.

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow:	Earth
Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The wire which is coloured Green and Yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol.
- The wire which is coloured Blue must be connected to the terminal in the plug which is marked with the letter N or coloured Black.
- The wire which is coloured Brown must be connected to the terminal in the plug which is marked with the letter L or coloured Red.

Ensure that these colour codings are followed carefully in the event of the plug being changed.

To avoid the risk of fire replace the fuse only with the correct value fuse, as indicated on the power supply.

The power supply contains no user-serviceable parts. Refer all servicing to a qualified service engineer, through the appropriate Soundcraft dealer.

INITIAL SETTING UP

You will probably use your **SPIRIT FOLIO** with a wide range of different types of sound source, and these will be at varying signal levels. It is important to set the **GAIN** of the inputs correctly to give the best performance.

Set up the individual mono input channels as follows:

- Plug in the chosen source (usually the MIC input for mics and the LINE input for anything else). Plug in phantom powered mics before switching the phantom power on.
- Set the Master Faders fully down.
- Provide the chosen source with a typical signal level and press and hold the PFL button by the fader. The level of signal will be shown on the right-hand Bargraph Meter (the Left meter will be switched off by depressing the PFL button).

- Adjust the input GAIN until the meter is just reaching the amber LED (0dB) at a typical maximum source level with a steady signal. If the source signal is rich in high-level transients (e.g. drums) a rather higher meter reading of +6/+9 will be needed to achieve an equivalent average level. This leaves enough headroom to cope with peaks in the signal without distortion.
- Adjust each mono input channel in the same way.
- If you find that you cannot set a reasonable level within the range of the GAIN control when using a MIC input, try the LINE input instead.

The Stereo inputs do not have a GAIN control, since the typical source for these inputs will be external tape machines or effects units which have a much more predictable signal level. Set the +4/-10 switch to +4 (released) initially, and check the input level with the PFL switch as described above. If the level is too low, switch to the -10 input setting.

You will now have initial settings for each of the input sources and are ready to start building a mix.

- Connect your power amplifiers and speakers and set the gain of the amplifiers to about 70%. Move the Master Faders gradually to the top, listening carefully for any hint of feedback or overload. You may find that the input gain settings will need to be edged back slightly as the mix is built up.
- Listen carefully for the characteristic sound of 'feedback'. If you cannot achieve a satisfactory input level setting without feedback, adjust microphone and speaker positions and try again.

Careful microphone placement and the choice of a suitable type of microphone is essential for successful PA use. The aim should be to place the microphone as close as possible to the source, to cut out unwanted surrounding sounds. This allows a lower gain setting on the mixer and helps to avoid feedback. You will also find that a well-placed microphone will not need any appreciable equalisation.

SETTING UP FOR RECORDING

While the connections to the folio for PA work are quite straightforward, recording is rather more demanding because the mixer is not only required to mix down input signals but also to provide a monitor mix for artists to hear previously recorded tracks when overdubbing new parts. A typical set-up is as follows:

- Connect input sources and set gain as described above. Connect Mix Left & Right outputs to the tape inputs.
- Route the channel signal to the required tape input by setting the PAN fully left or right. For example, panning fully left will route the signal from the Left Mix output only. This allows an individual source to be sent to an individual tape track.
- Connect the tape outputs to unused mixer Line Inputs. Set the faders on these channels at zero.
- Connect a monitor amplifier for foldback headphones or a monitor speaker to the Aux 1 output. Set the amplifier volume to a normal listening level.
- Use the Aux 1 send controls on the tape channels to set up a mono monitor mix. (make sure that all other Aux 1 controls are fully off)
- If a compressor is to be used, connect this to the master insert points.
- Connect any effects required using Aux 2, and return them to the mixer on unused Line inputs to allow the effect to be balanced with the original source.

It is important to match the input and output levels of your mixer and recording device to avoid distortion and create the best possible recording. Set up the mixer and recorder using the inbuilt oscillator in the following way:

- Press OSCILLATOR TO MIX and raise the Master Faders until the bargraph meters just read '0' (amber LEDs), corresponding to a nominal +4dB output level.
- Adjust the input level on your recording machine to read zero (conventional tape or cassette) or -12 (if using a DAT recorder, especially if no compressor is included in the mixer output path)
- Record between 10 and 30 seconds of oscillator tone on both tape channels at the beginning of the tape. This is a standard procedure and provides a means of checking the replay level whatever machine is used for playback.
- Select TAPE RETN (Tape Return) and adjust TAPE RETURN LEVEL until the meters again read '0'.
- Release TAPE RETN to listen once again to the mix output. There should not now be a significant difference in level between the mix output (TAPE RETN up) and playback (TAPE RETN down).

THE CONTROLS IN MORE DETAIL

MONO INPUT CHANNEL

MIC INPUT

The mic input accepts XLR-type connectors and is designed to suit a wide range of BALANCED or UNBALANCED low-level signals, whether from delicate vocals requiring the best low-noise performance or close-miked drum kits needing maximum headroom. Professional dynamic, condenser or ribbon mics are best because these will be LOW IMPEDANCE. While you can use low-cost HIGH IMPEDANCE mics, you do not get the same degree of immunity to interference on the microphone cable and as a result the level of background noise may be higher. If you turn the PHANTOM POWER on (top right-hand side of the mixer) the socket provides a suitable powering voltage for professional condenser mics.

DO NOT use unbalanced sources with the phantom power switched on. The voltage on pins 2 & 3 of the XLR connector may cause serious damage.

Unplug any mics if you want to use the corresponding LINE Input to avoid the load presented by the mic from affecting the Line Input gain. The input level is set using the GAIN knob.

LINE INPUT

Accepts 3-pole 'A' gauge (TRS) jacks. Use this input for sources other than mics, such as keyboards, drum machines, synths, tape machines or guitars. The input is BALANCED for low noise and immunity from interference, but you can use UNBALANCED sources by wiring up the jacks as shown below, although you should then keep cable lengths as short as possible to minimise interference pick-up on the cable. Unplug anything in the MIC input if you want to use this socket. Set the input level using the GAIN knob.

GAIN

This knob sets how much of the source signal is sent to the rest of the mixer. Too high, and the signal will distort as it overloads the channel and causes clipping. Too low, and the level of any background hiss will be more noticeable and you may not be able to get enough signal level to the output of the mixer. This is shown in the diagram below:


Setting the knob to the 'U' mark gives unity gain for the LINE input. Note that some sound equipment, particularly that intended for domestic use, operates at a lower level (-10dBV) than professional equipment and will therefore need a higher gain setting to give the same output level.

See 'Initial Setting Up' on page 10 to learn how to set the GAIN correctly.


100HZ HI-PASS FILTER

Pressing this switch reduces the level of bass frequencies only, and is a real bonus for a such a small mixer. Use this in live PA situations to reduce stage rumble or 'popping' from microphones.



Balanced Mic Input - XLR

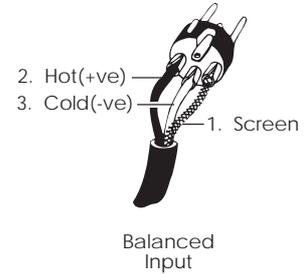


Unbalanced Mic Input - XLR

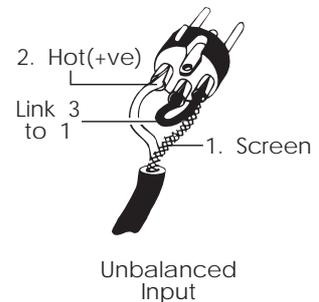

3-Pole Jack

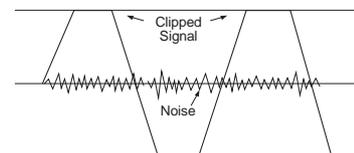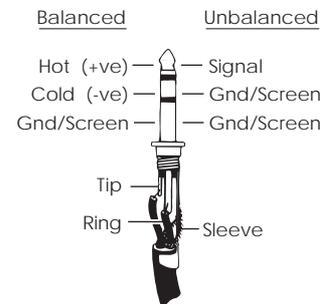

If the signal level is too high, clipping distortion may occur.

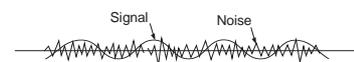


If the signal level is too low it may be masked by the noise.

EQUALISER

The Equaliser (EQ) allows precise manipulation of the sound, particularly to improve the sound in live PA applications where the original signal is often far from ideal due to poor acoustics or restrictions on where to place microphones and where slight boosting or cutting of particular voice frequencies can really make a difference to clarity. The EQ allows enough control to improve, for instance, bad recordings or the precision to gently enhance vocal or live instrument tracks. There are three sections, HF, MID and LF giving the sort of control usually only found on much larger mixers. The EQ knobs can have a dramatic effect, so use them sparingly and listen carefully as you change any settings so that you get to know how they affect the sound.

HF EQ

Turn to the right to boost high (treble) frequencies by up to 15dB, adding crispness to cymbals, vocals and electronic instruments. Turn to the left to cut these frequencies by up to 15dB, reducing hiss or over-emphasis of high-frequency consonants, which can occur with certain types of microphone. Set the knob in the centre-detented position when a flat response is required.

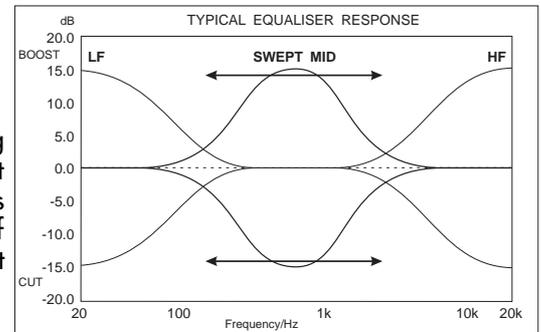

MID EQ

There are two knobs which work together to form a SWEPT MID EQ. The lower knob provides 15dB of boost and cut, just like the HF EQ knob, but the frequency at which this occurs can be set by the upper knob over a range of 250Hz to 6kHz. This allows some truly creative improvement of the signal in live situations, because this mid band covers the range of most vocals. Listen carefully as you use these controls together to find how particular characteristics of a vocal signal can be enhanced or reduced. Set the lower knob to the centre-detented position when not required.

LF EQ

Turn to the right to boost low (bass) frequencies by up to 15dB, adding warmth to vocals or extra punch to synths, guitars and drums. Turn to the left to cut low frequencies by up to 15dB for reducing hum, stage rumble or to improve a mushy sound. Set the knob to the centre-detented position when not required.

AUX SEND 1

This is used to set up a separate mix for FOLDBACK, EFFECTS or recording, and the combination of all the Aux 1 Sends is mixed to the Aux 1 Output at the rear of the mixer. The controls are specially chosen to give a particularly smooth control range at the lower end of the scale where it is most needed - quite unique on a mixer of this type. For Effects it is useful for the Aux Send to fade up and down with the fader (this is called POST-FADE), but for Foldback or Monitor feeds it is important for the send to be independent of the fader so that, for instance, the mix to artists headphones is not affected by changes in fader level (this is called PRE-FADE). The Master Section AUX1 PRE switch allows you to switch from pre- to post-fade across the whole mixer as required. Leave the knob turned down when not in use.

AUX SEND 2

This is similar to the Aux Send 1 control, but is always POST-FADE.

PAN

This control sets the amount of the channel signal feeding the Right and Left MIX outputs, allowing you to move the source smoothly across the stereo image. When the control is turned fully right or left you are able to place the signal at unity gain to either left or right of the output.

FADER

The linear FADER gives you smooth control of the overall signal level in the channel strip, allowing precise balancing of the various source signals being mixed to the Master Section. You get most control when the input GAIN is set up correctly, giving a normal fader position around the '0' mark, generous control range below and some gain in hand above the mark when you need that little bit extra. See the 'Initial Setting Up' section on page 10 for help in setting a suitable signal level.

STEREO INPUT CHANNEL

STEREO INPUT L & R

These inputs accept 3-pole 'A' gauge (TRS) jacks. Use these inputs for sources such as keyboards, drum machines, synths, tape machines or as returns from processing units. The inputs are BALANCED for low noise and immunity from interference, but you can use UNBALANCED sources by wiring up the jacks as shown, although you should then keep cable lengths as short as possible to minimise interference pick-up.

INPUT +4/-10

Most professional equipment uses input and output levels of +4dBu, but semi-professional tape machines or hi-fi systems use a lower level of -10dBV. This switch allows you to match the sources

connected to the Stereo input jacks to either standard, which is important to ensure the best possible sound quality. If you are not sure what input level is appropriate, start with the switch UP to select +4dBu. If you are unable to achieve an adequate signal level (even with the fader at maximum), press the switch in for -10dBV.

HF EQ

Turn to the right to boost high (treble) frequencies, adding crispness to percussion from drum machines, synths and electronic instruments. Turn to the left to cut these frequencies, reducing hiss or excessive brilliance. Set the knob in the centre-detented position when not required. The control has a shelving response giving 15dB of boost or cut at a fixed frequency.

LF EQ

Turn to the right to boost low (bass) frequencies, adding extra punch to synths, guitars and drums. Turn to the left to reduce hum, boominess or improve a mushy sound. Set the knob to the centre-detented position when not required. The control has a shelving response giving 15dB of boost or cut at a fixed frequency.

AUX SEND 1

This is used to set up a separate mono mix for FOLDBACK, EFFECTS or recording, and the combination of all the Aux 1 Sends is mixed to the Aux 1 Output. For Effects it is useful for this to fade up and down with the FADER (this is called POST-FADE), but for Foldback or Monitor feeds it is important for the send to be independent of the FADER so that, for instance, the mix to artists headphones is not affected by changes in fader level (this is called PRE-FADE). The Master Section AUX1 PRE switch allows you to choose pre- or post-fade across the whole mixer as required. Leave the knob turned down when not in use.

AUX SEND 2


This is similar to the Aux Send 1 control, but is always POST-FADE.

BALANCE

This control sets the amount of the channel signal feeding the Right and Left MIX outputs, allowing you to balance the source in the stereo image. When the control is turned fully right or left you feed only that side of the signal to the mix. Unity gain is provided by the control in the centre-detented position.

FADER

The linear FADER gives you smooth control of the overall signal level in the channel strip, allowing precise balancing of the various source signals being mixed to the Master Section. It is important that the input level is set correctly with the +4/-10 switch to give maximum travel on the fader which should normally be used at around the '0' mark. See the 'Initial Setting Up' section on page 10 for help in setting the right level.

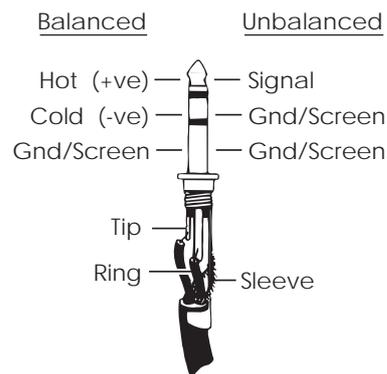

MASTER SECTION

AUX 1 PRE

The input channels provide both Pre- and Post-Fade AUX 1 sends which may be selected desk-wide on the Master Section. Press the AUX 1 PRE switch to make all of the AUX 1 Sends on the channel strips PRE-FADE. This means that they will all be unaffected by the position of the channel faders, making them ideal for FOLDBACK or MONITORING. Since this button affects all the channels on the mixer, its importance is highlighted by a different cap colour.

When the switch is released the AUX 1 Sends are all POST-FADE, and will fade up and down with the channel faders. This is more suitable for effects sends which need to fade out with the associated source.

AUX 1 AFL (AFTER FADE LISTEN)

Just like the PFL switches on the channels, you can monitor the AUX 1 output by pressing the AFL switch. This routes the AUX 1 output signal to the MONITOR or PHONES, replacing any existing signal (normally the Monitor receives either MIX or the Tape Return, depending on the position of the MIX switch - see below). The RIGHT METER also switches from the selected source to display the PFL/AFL signal and the PFL/AFL LED lights to warn that a PFL or AFL switch is pressed. When you let go of the switch the Monitor returns to the previous source.

AUX 2 AFL

This works just the same as AUX 1 AFL.

BARGRAPH METERS

The three colour BARGRAPH METERS have a PEAK response and normally follow the Monitor selection to show the level of the MIX RIGHT and MIX LEFT outputs, giving you a constant warning of excessive peaks in the signal which might cause overloading. The fast attack of the meters means that a signal with high level transients (e.g. kick drum) will tend to give a higher reading than a less dynamic signal (e.g. a synth) at the same level. You should therefore aim for an average reading of +6/+9 if the mix contains a high proportion of high level transients and a lower reading of around '0' for steadier signals with the Master Faders at about the '0' mark.

If the output level is too low and hardly registering at all on the meters, the level of background noise may become significant. In this case check that input levels and gain settings are correct (see the section -- Initial Setting Up)

OSCILLATOR TO MIX

A built-in 1kHz OSCILLATOR provides a test tone for system tests or aligning Tape Machines. Press the switch to turn ON the oscillator and feed the tone to the MIX outputs at a fixed level and frequency. **DON'T DO THIS DURING A LIVE PERFORMANCE, OR WITH THE AMPLIFIERS TURNED UP HIGH** - a sudden, very loud burst of tone will not do your ears or your loudspeakers any good! Since this button must therefore only be used with caution, its importance is highlighted by a different cap colour.

PHANTOM POWER

Many professional condenser mics need PHANTOM POWER, which is a method of sending a powering voltage down the same wires as the mic signal. Press the switch to enable the +48V power to all of the MIC inputs. **DO NOT** turn on the phantom power when using unbalanced mics which may be damaged by the voltage applied to pin 2 & 3 of the mic input XLR.

Note: Mics should always be plugged in before switching the Phantom Power ON.


MASTER FADERS

The MASTER FADERS set the final level of the MIX outputs, and separate faders are provided for LEFT and RIGHT. These should normally be set close to the '0' mark if the input GAIN settings have been correctly set, to give maximum travel on the faders for smoothest control. If, even with correct input settings, you find that you are working with the master faders very low, then turn your power amplifiers down so that you can bring the fader level back to normal.

TAPE RETURN LEVEL

The TAPE RETURN jacks are an ideal place to connect the playback of a tape machine, without using up any of the LINE inputs. This pot sets the level of playback signal fed either to the MIX (when MIX is pressed) or MONITOR, when TAPE RETN is pressed.

The TAPE RETURN is also the best way of connecting a tape or CD player to feed pre-show music to a PA rig, since this leaves all input settings unaltered. It can also serve as the return from an Effects unit to save using up Line Inputs.

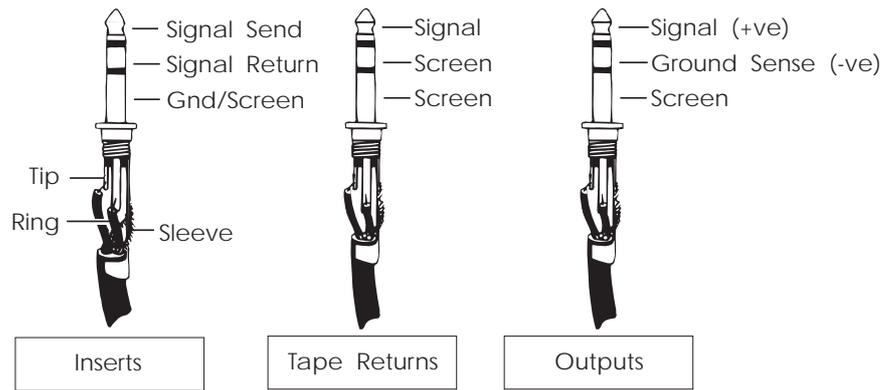

TAPE RETURN TO MIX

Press this switch to route the TAPE RETURN signal direct to the mix outputs. Adjust the input level with the TAPE RETURN LEVEL control. The Tape Return signal will now be present at the Mix outputs, at a level set by the Master Faders, and the meters will display this same signal.

TAPE RETURN TO MONITOR

Press this switch to route the TAPE RETURN signal to the MONITOR and PHONES outputs. Adjust the input level with the TAPE RETURN LEVEL control. The meters will now be directly reading the level of the Tape Return.

NOTE: If both TAPE RETN and TAPE RETURN TO MIX are pressed, although the mix outputs will be carrying the Tape Return signal under the control of the Master Faders, the meters will be displaying the full Tape Return signal.

MONITOR & PHONES LEVEL


This control sets the output level to the MONITOR LEFT & RIGHT outputs. If HEADPHONES are plugged into the PHNS jack the Monitor outputs are cut off, and the knob then sets the headphone listening level. When the PHONES are unplugged the Monitor output is restored.

MIX INSERTS

The Mix Left and Right signal paths have pre-fade insert points which provide a means of diverting the signal to an external processing unit such as a compressor or limiter. Inserting a jack into the insert breaks the signal path and allows the INSERT SEND (on the tip of the jack) to feed the input of the external unit and the INSERT RETURN (on the ring of the jack) to receive the corresponding output. Note that if the tip and ring of the jack are shorted together the signal path remains unbroken and the Insert may then be used as a way of tapping off the Mix signal before the fader.

NOTE:


The internal power regulation circuits for the mixer are fitted in the top right-hand corner of the case. A small amount of heat is dissipated by these circuits and it is therefore quite normal for this corner of the mixer to become warm in normal operation.

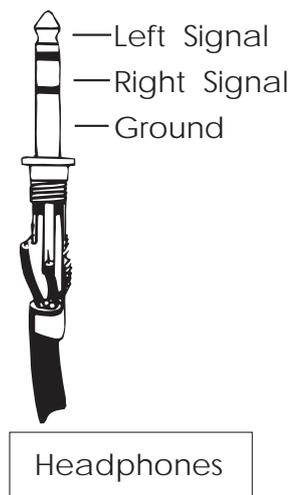

APPLICATIONS


STEREO PUBLIC ADDRESS

In this basic PA set-up, various sources are connected to the inputs, microphones to Mic inputs and keyboards etc. to Line inputs. Note that some guitars will not produce sufficient level for a direct connection, and will require a Direct Injection (DI) box connected via the microphone input. The output is taken from Mix L & R and connected to the speakers via a suitable power amplifier. A compressor/limiter is included in the Mix inserts, and a cassette machine connects to the Tape Return to provide interval music.

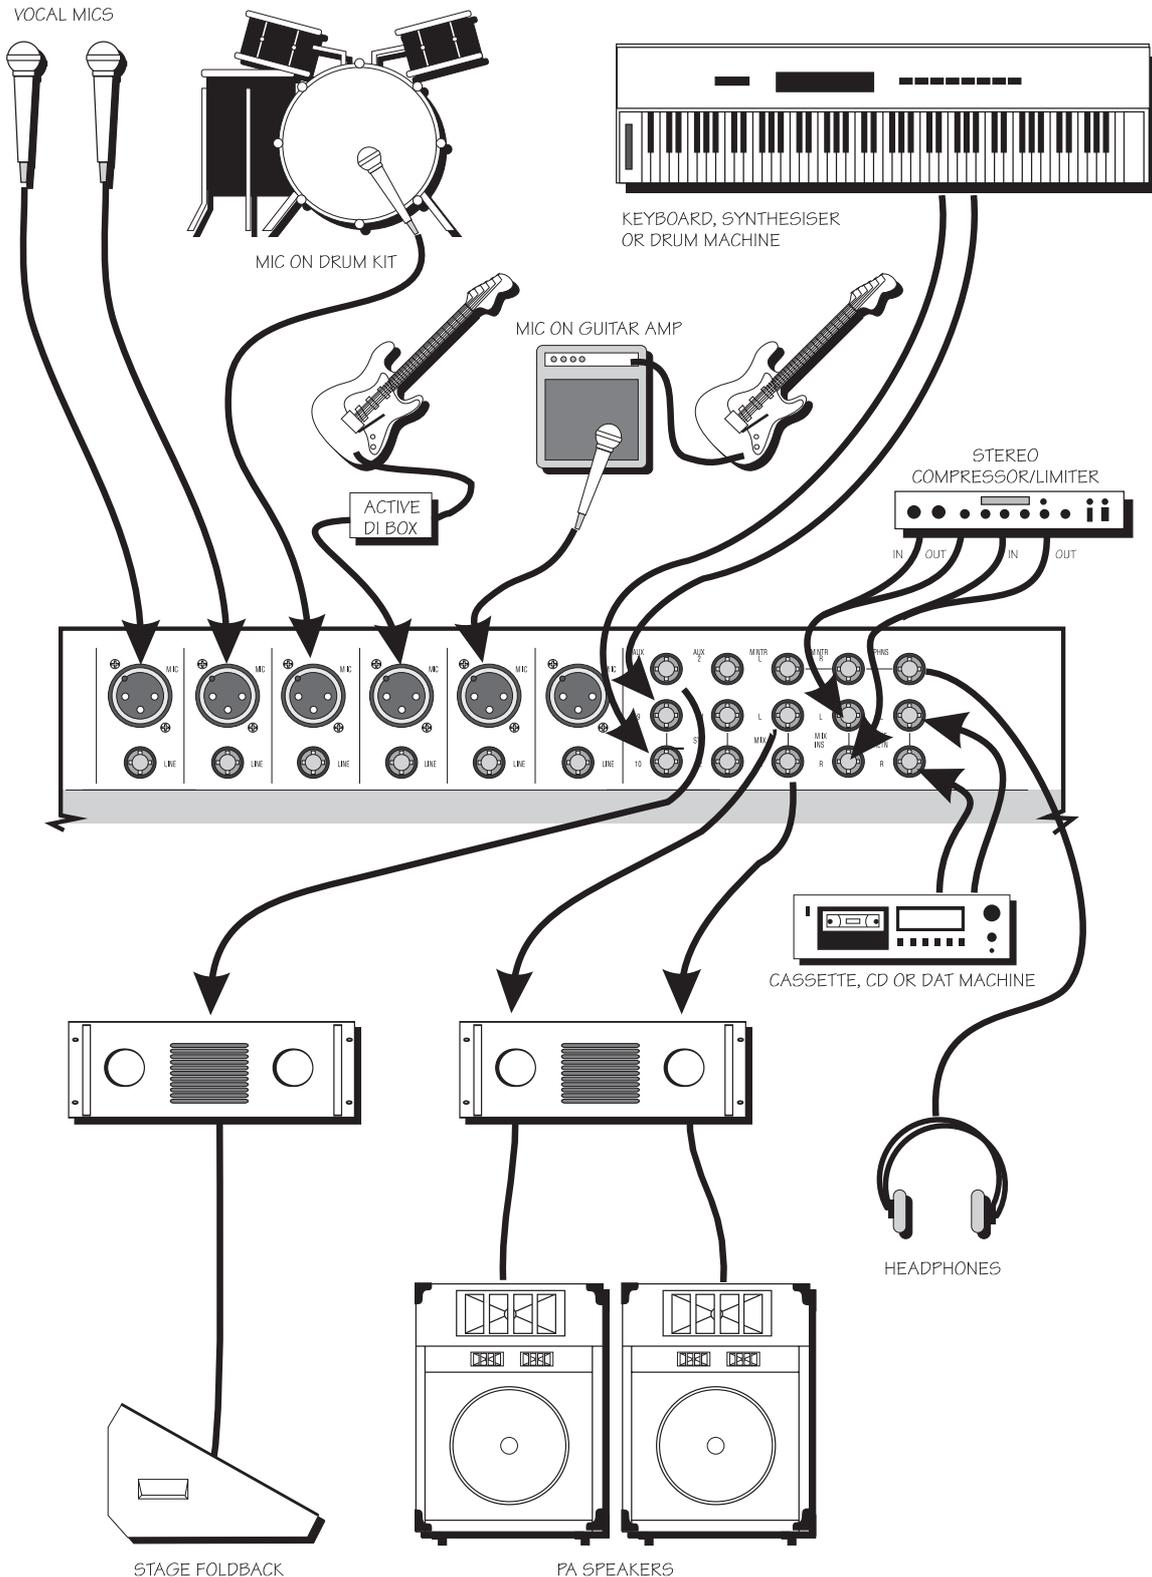


STEREO RECORDING

The mixer may be used for 2-track or basic multitrack recording live or in a studio set-up. The configuration is similar to the previous example, but with the Mix Outputs feeding a 2-track Tape Machine. A reverb or other effects unit is fed from Aux 1 (set as post-fade) and brought back to the mixer on a Stereo input.

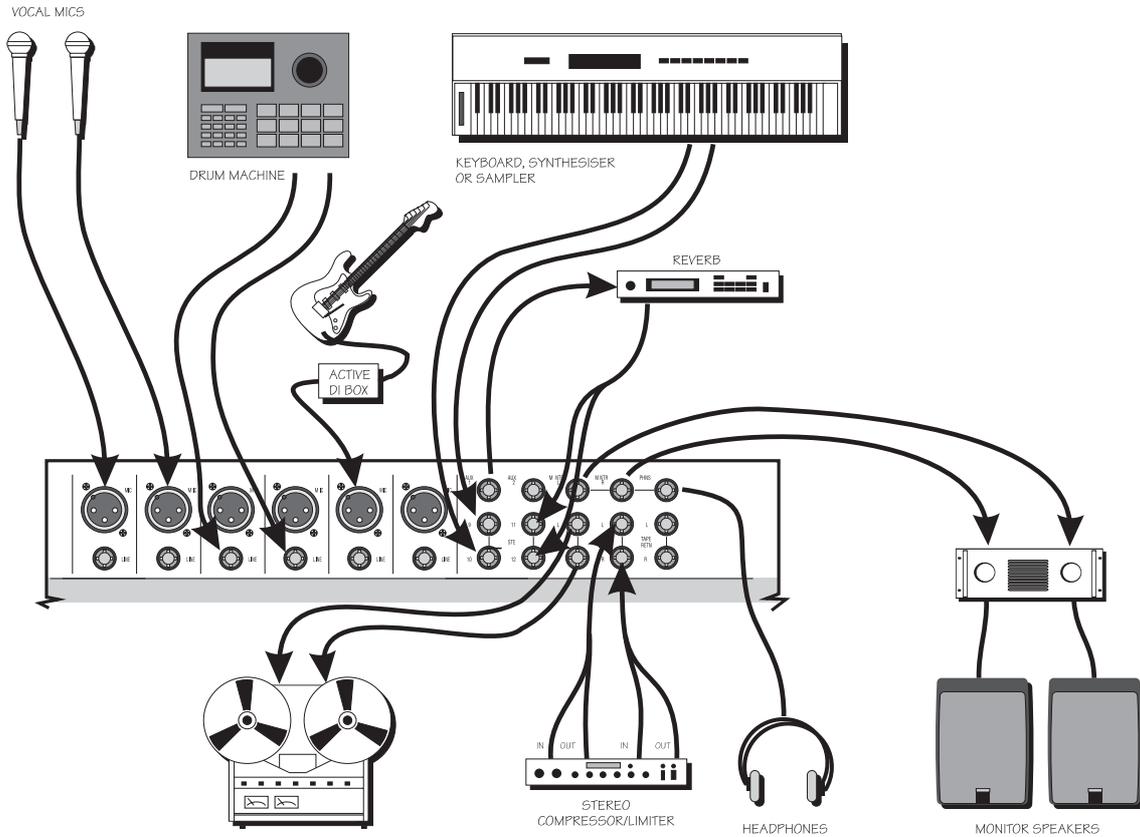

LOCATION MIXING

In this example the mixer is used as a simple, very portable microphone mixer, with the addition of an electronic instrument input if required, mixed down to a 2-track tape machine. A compressor/limiter is included at the Mix Inserts.

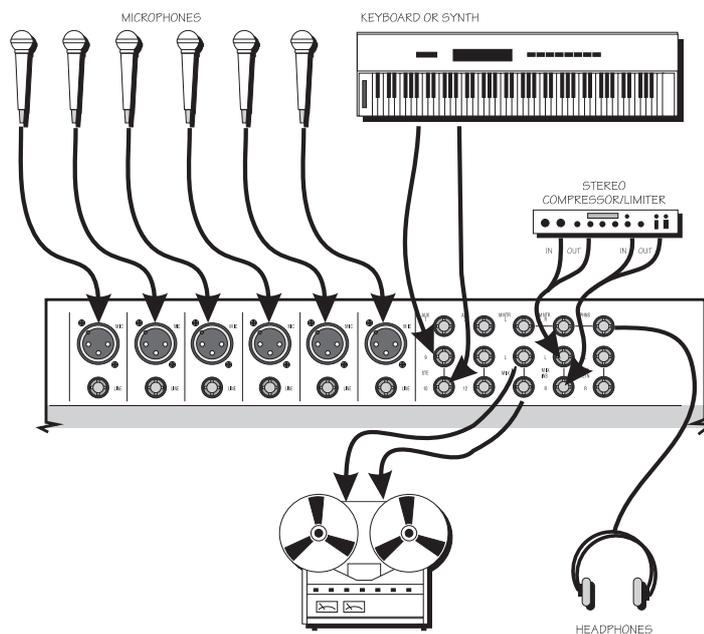

GLOSSARY


AFL (After Fade Listen)	a function that allows the operator to monitor the post-fade signal in a channel independently of the main mix.
Balance	the relative levels of the left and right channels of a stereo signal.
Balanced	a method of audio connection which 'balances' the signal between two wires and a screen which carries no signal. Any interference is picked up equally by the two wires, but out of phase resulting in cancellation of the interference signal.
Clipping	the onset of severe distortion in the signal path, usually caused by the peak signal voltage being limited by the circuit's power supply voltage.
dB (decibel)	a ratio of two voltages or signal levels, expressed by the equation $dB=20\log_{10}(V1/V2)$. Adding the suffix 'u' denotes the ratio is relative to 0.775V RMS.
DI	(direct injection) the practice of connecting an electric musical instrument directly to the input of the mixing console, rather than to an amplifier and loudspeaker which is covered by a microphone feeding the console.
Effects	the use of devices to alter or process the sound to add special effects e.g. reverb, normally as a mix of the original ('dry') sound and the treated version.
Equaliser	a device that allows the boosting or cutting of selected bands of frequencies in the signal path.
Feedback	the 'howling' sound caused by bringing a microphone too close to a loudspeaker driven from its amplified signal.
Foldback	a feed sent back to the artistes via loudspeakers or headphones to enable them to monitor the sounds they are producing.
FOLIO	the standard in low cost quality mixers.
Frequency response	the variation in gain of a device with frequency.
Headroom	the available signal range above the nominal level before clipping occurs.
High Pass filter	a filter that rejects low frequencies.
Line level signals	at a nominal level of -10 to +6dBu, usually coming from a low impedance source.
Oscillator	a built-in tone generator for test and line-up purposes.
Peaking	an equaliser response curve affecting only a band of frequencies i.e. based on a bandpass response.
PFL (pre-fade listen)	a function that allows the operator to monitor the pre-fade signal in a channel independently of the main mix.
Phantom Power	the +48V d.c. voltage applied equally to the two signal pins of a balanced mic input to provide powering for condenser microphones.
Post-Fade	the point in the signal path <i>after</i> the channel or master fader and therefore affected by fader position.
Processor	a device which affects the whole of the signal passing through it, e.g. gate, compressor or equaliser
Rolloff	a fall in gain at the extremes of the frequency response.
Shelving	an equaliser response affecting all frequencies above or below the break frequency i.e. a highpass or lowpass derived response.
Signal to Noise Ratio	a expression of the difference in level between the audio signal and background system noise.
Spill	acoustic interference from other sources.
Sweep EQ	an Equaliser section (e.g. MID EQ) which operates at a variable rather than fixed frequency giving increased flexibility to the user.
Talkback	the operator speaking to the artistes or to tape via the auxiliary or group outputs.
Tape Return	a line level input provided specifically to receive the playback output of a tape machine
Transient	a momentary rise in the signal level.
TRS Jacks	a 3-pole jack with Tip, Ring and Sleeve connections
Unbalanced	a method of audio connection which uses a single signal wire and the cable screen as the signal return. This method does not provide the noise immunity of a <i>balanced input</i> (see above).

TECHNICAL SPECIFICATIONS

MIX NOISE	Input faders down, Master Faders up	< -83dBu		
AUX NOISE	Input Sends down	< -83dBu		
E.I.N.	Source resistance 150Ω, gain maximum	-129dBu		
DISTORTION	Mic Gain 30dB, Mix Out at +14dBu	<0.005% 20Hz - 20kHz		
CROSSTALK	1 kHz sine wave			
	Input Fader Attenuation	>100dB typical		
	Aux Send Attenuation	>85dB		
	Adjacent Channel	>90dB		
FREQUENCY RESPONSE	20Hz- 30kHz, relative to 1kHz	+/- 1dB		
INPUT & OUTPUT IMPEDANCES	Mic Inputs	2kΩ		
	Line Inputs	10kΩ		
	Outputs	75Ω		
INPUT & OUTPUT LEVELS	Mic Input	+11dBu maximum		
	Line Input	>+30dBu maximum		
	Any Output	+22dBu maximum		
	Headphone Output	200mW each side		
WEIGHT	Model	Console	Power Pack	Packing Box
	10/2	4.2Kg	0.6Kg	0.8Kg
	12/2	4.2Kg	0.6Kg	0.8Kg
	12/2 RM	5.2Kg	0.6Kg	0.8Kg

DIMENSIONS

All dimensions are in millimetres

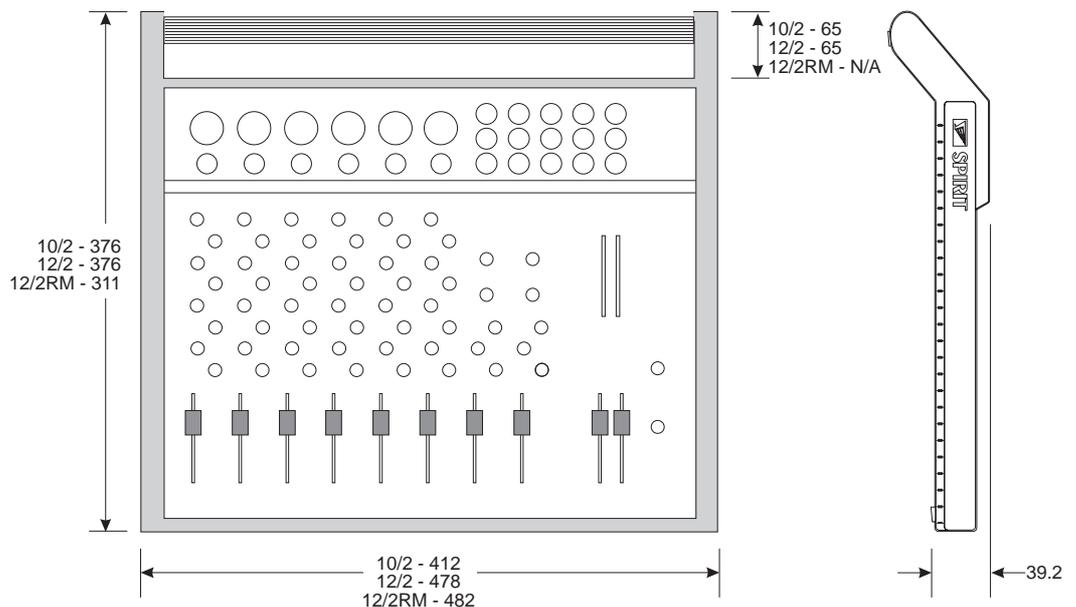

SYSTEM BLOCK DIAGRAM

MASTER SECTION

PHANTOM POWER
+48V

AUX 1 PRE
AUX 1 APL
AUX 2 APL

AUX 1 POST BUS
AUX 1 PRE BUS
AUX 2 BUS
RIGHT BUS
LEFT BUS

AUX 1
AUX 2

TAPE RETURN LEFT
TAPE RETURN RIGHT
TAPE RETURN TO MIX
TAPE RETURN TO MON

MIX LEFT
MIX RIGHT

MONITOR LEFT
MONITOR RIGHT
PHONES

LEFT METER
MONITOR & PHONES
RIGHT METER

FADER
MIX INSERT LEFT
MIX INSERT RIGHT

OSCILLATOR
OSC TO MIX

PFL AEL
PFL ENABLE

MONO INPUT CHANNEL

PHANTOM POWER

MIC INPUT

LINE INPUT

GAIN

100Hz HIGH PASS

EQ

PAN

FADER

AUX 2

POST

AUX 1

PRE

PFL

STEREO INPUT CHANNEL

STEREO LEFT

STEREO RIGHT

INSERT

+4/-10

EQ

FADER

BALANCE

AUX 2

POST

AUX 1

PRE

PFL